Luxury
Massage Bathtub

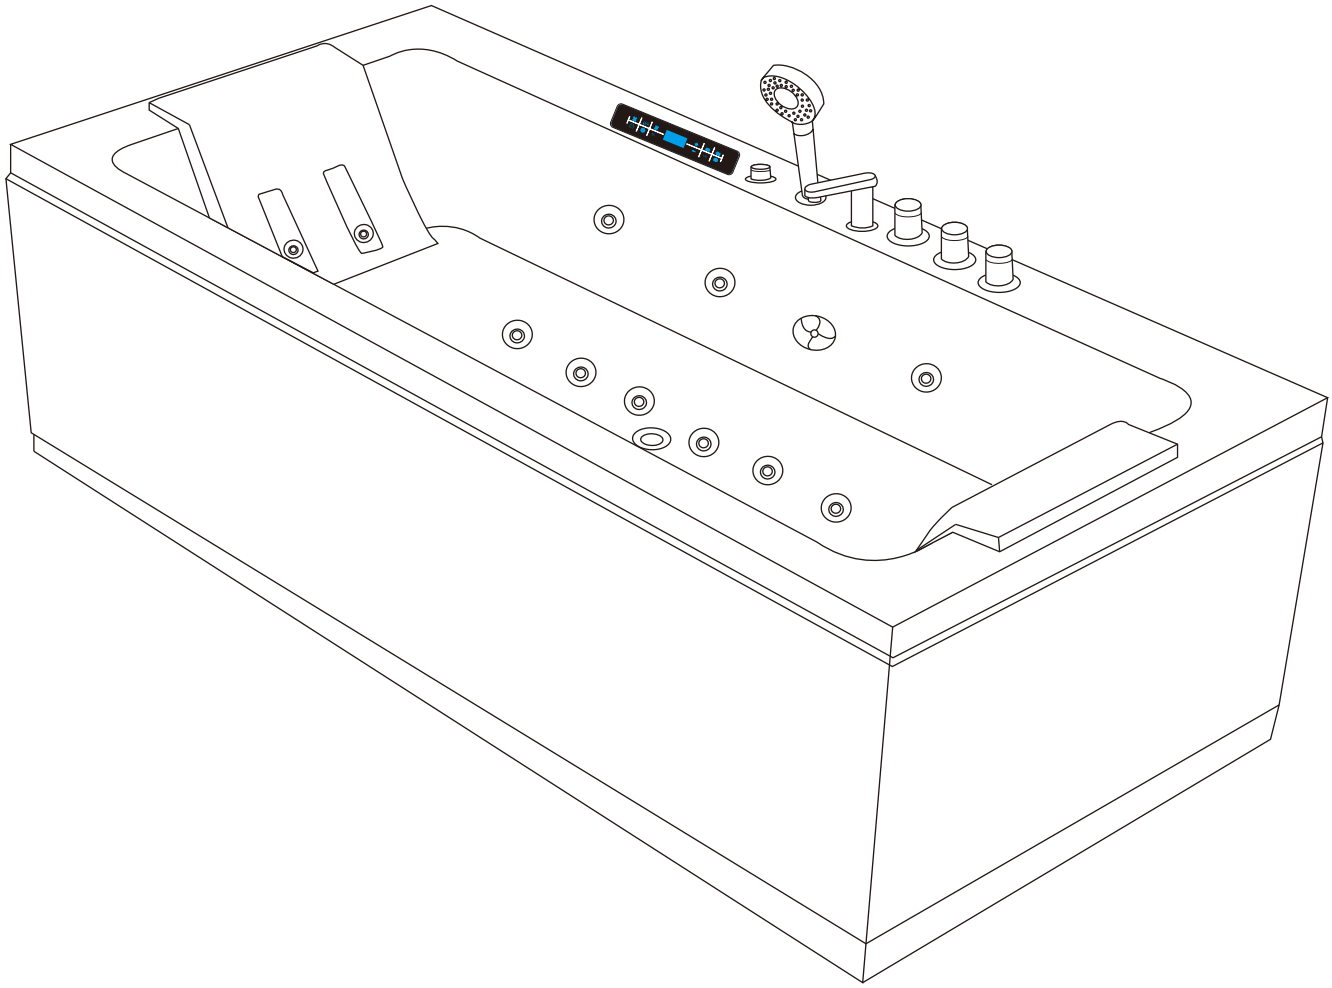

DELOS Premium

1600x750x580mm

1700x800x580mm

1850x900x620mm

Functional Introduction

1.Computer panel
2.Switch for speed 3.Hand shower
4.Faucet 5.Switch for hand shower & faucet
6.Cool water 7.Hot water

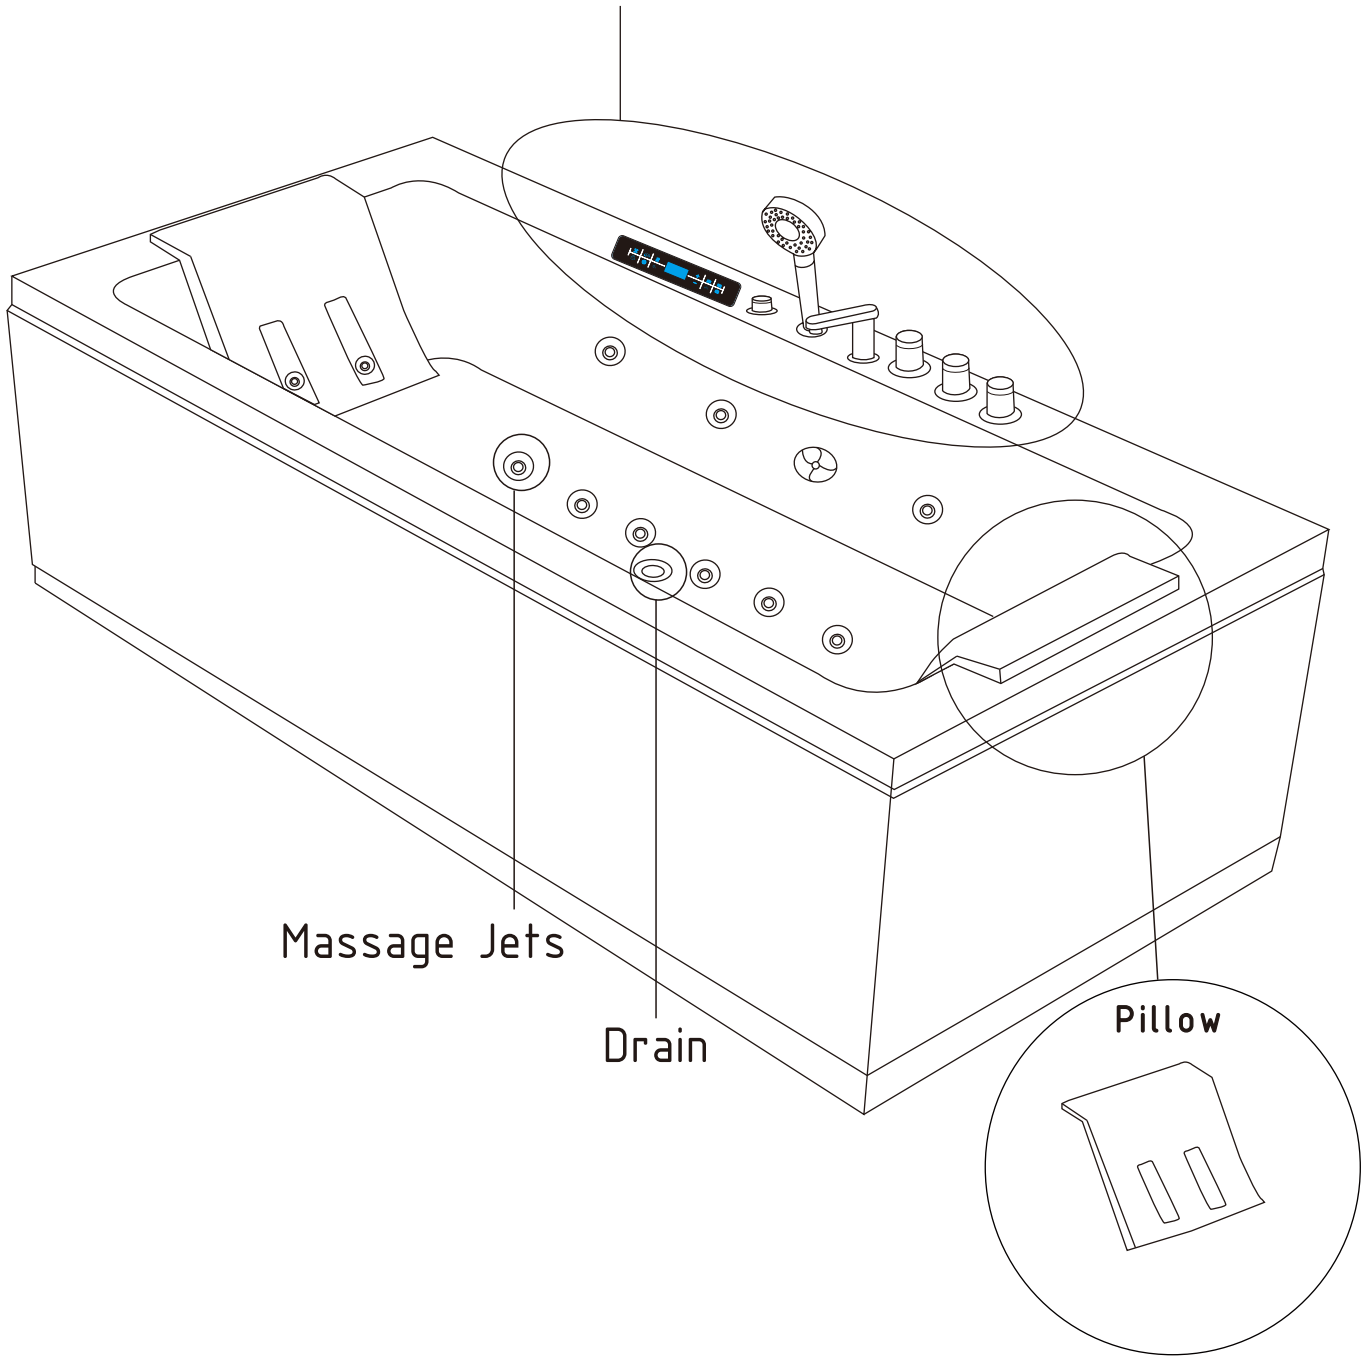

Water & Electricity Position Design

Length unit: mm

1600x750x580mm

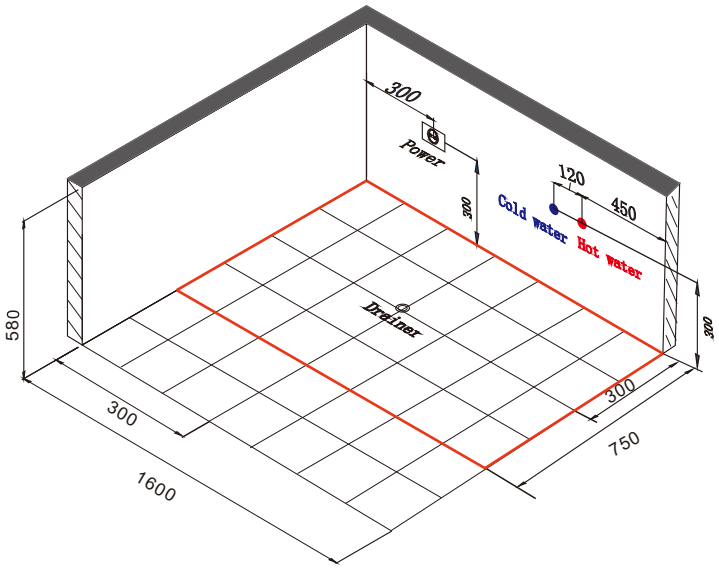

1700x800x580mm

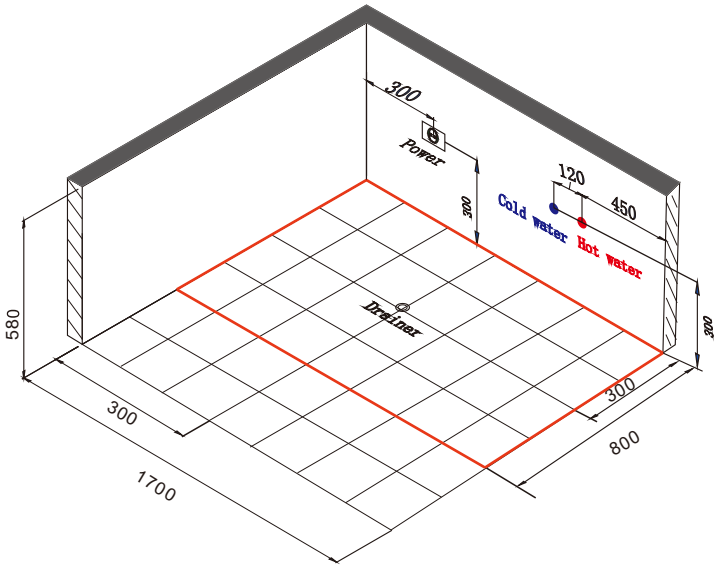

1850x900x620mm

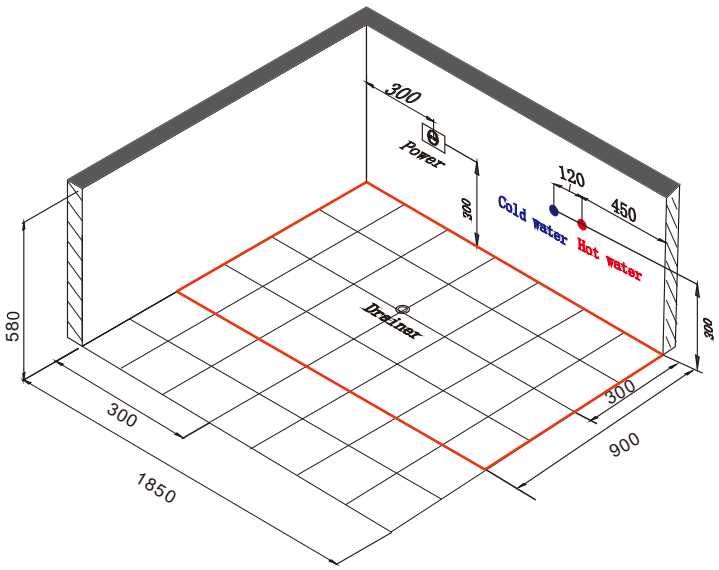

Power Request

DXD HEATER

MODEL SDP-1500 A
VOLTAGE 220-240VAC 50/60Hz
POWER 1.5KW HP 2

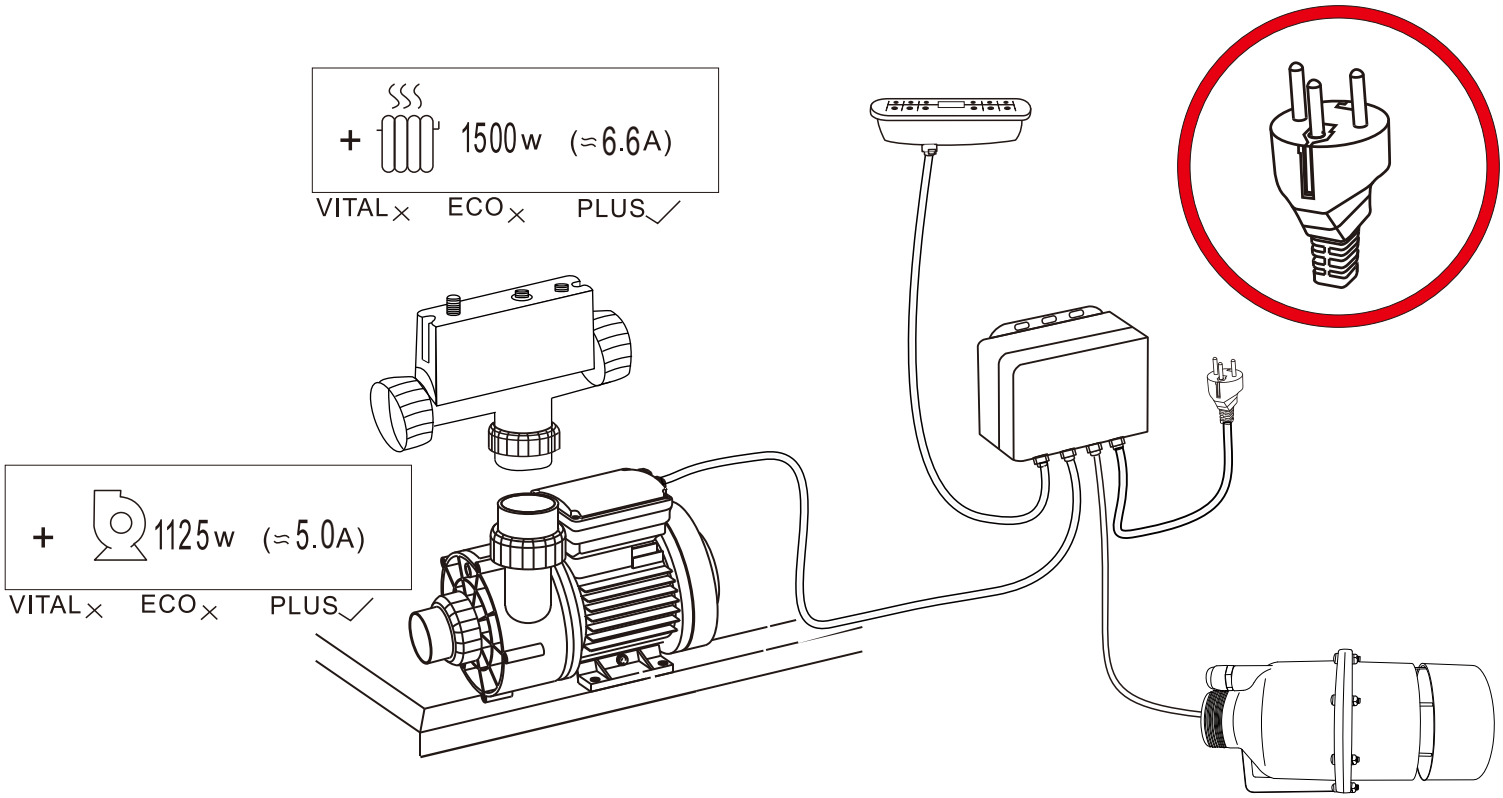

DXD PUMP

MODEL DXD-315 E AC 220-240V 50Hz 1125W CLASS F IPX5
MAX WATER TEMPERATURE 50℃ 15u F/450V Hmin 1m

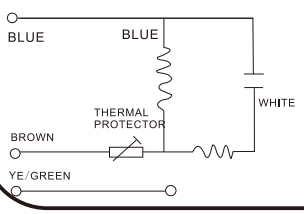

Ground properly!
Do Not Start Pump
Without Water!

DXD AIR PUMP

MODEL DXD- 6E- 350 220-240V 50HZ/60HZ 350W
S1 CLASS 155(F)
IP X5
BAR CODE:

Accessories Installation

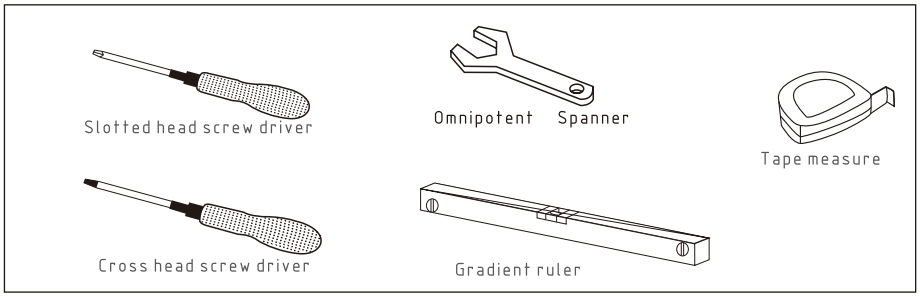

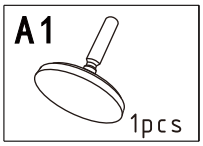

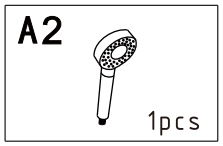

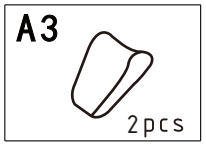

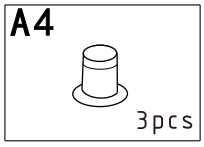

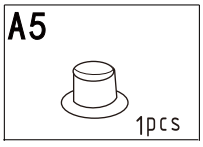

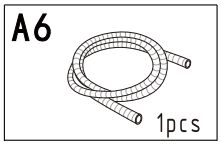

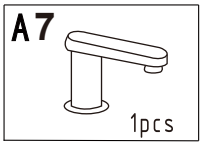

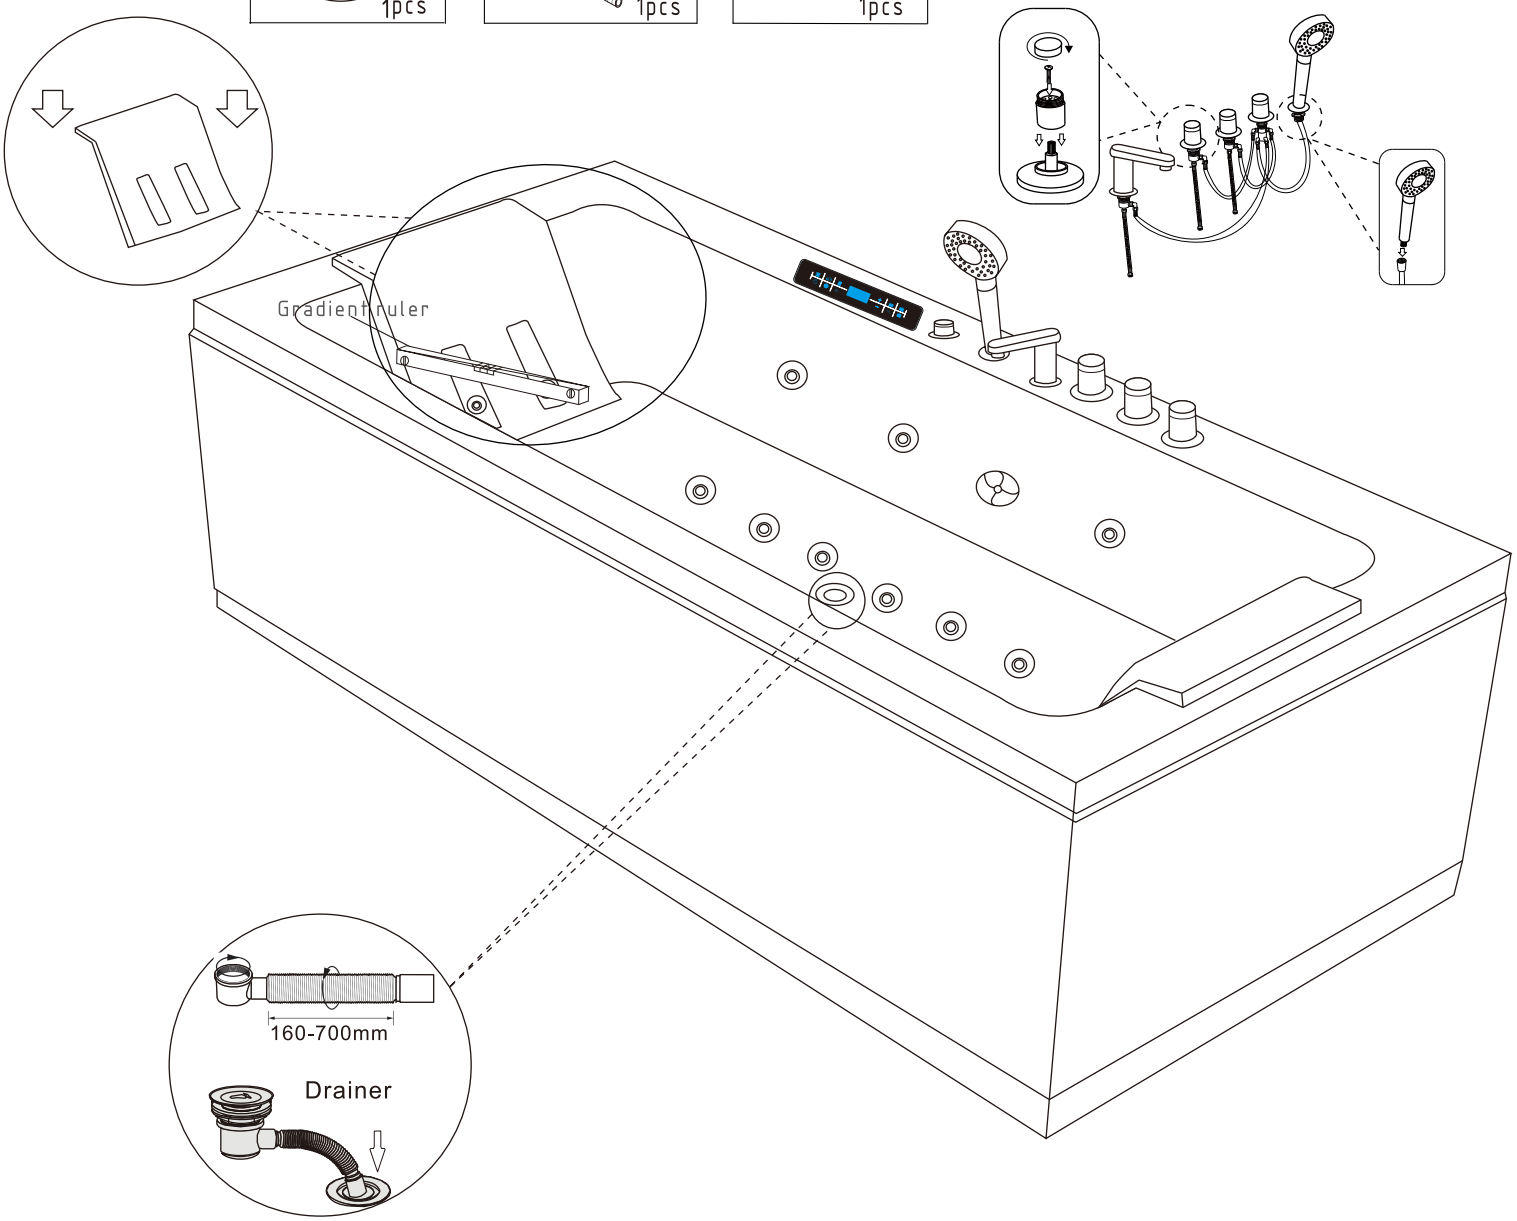

Functional Instructions

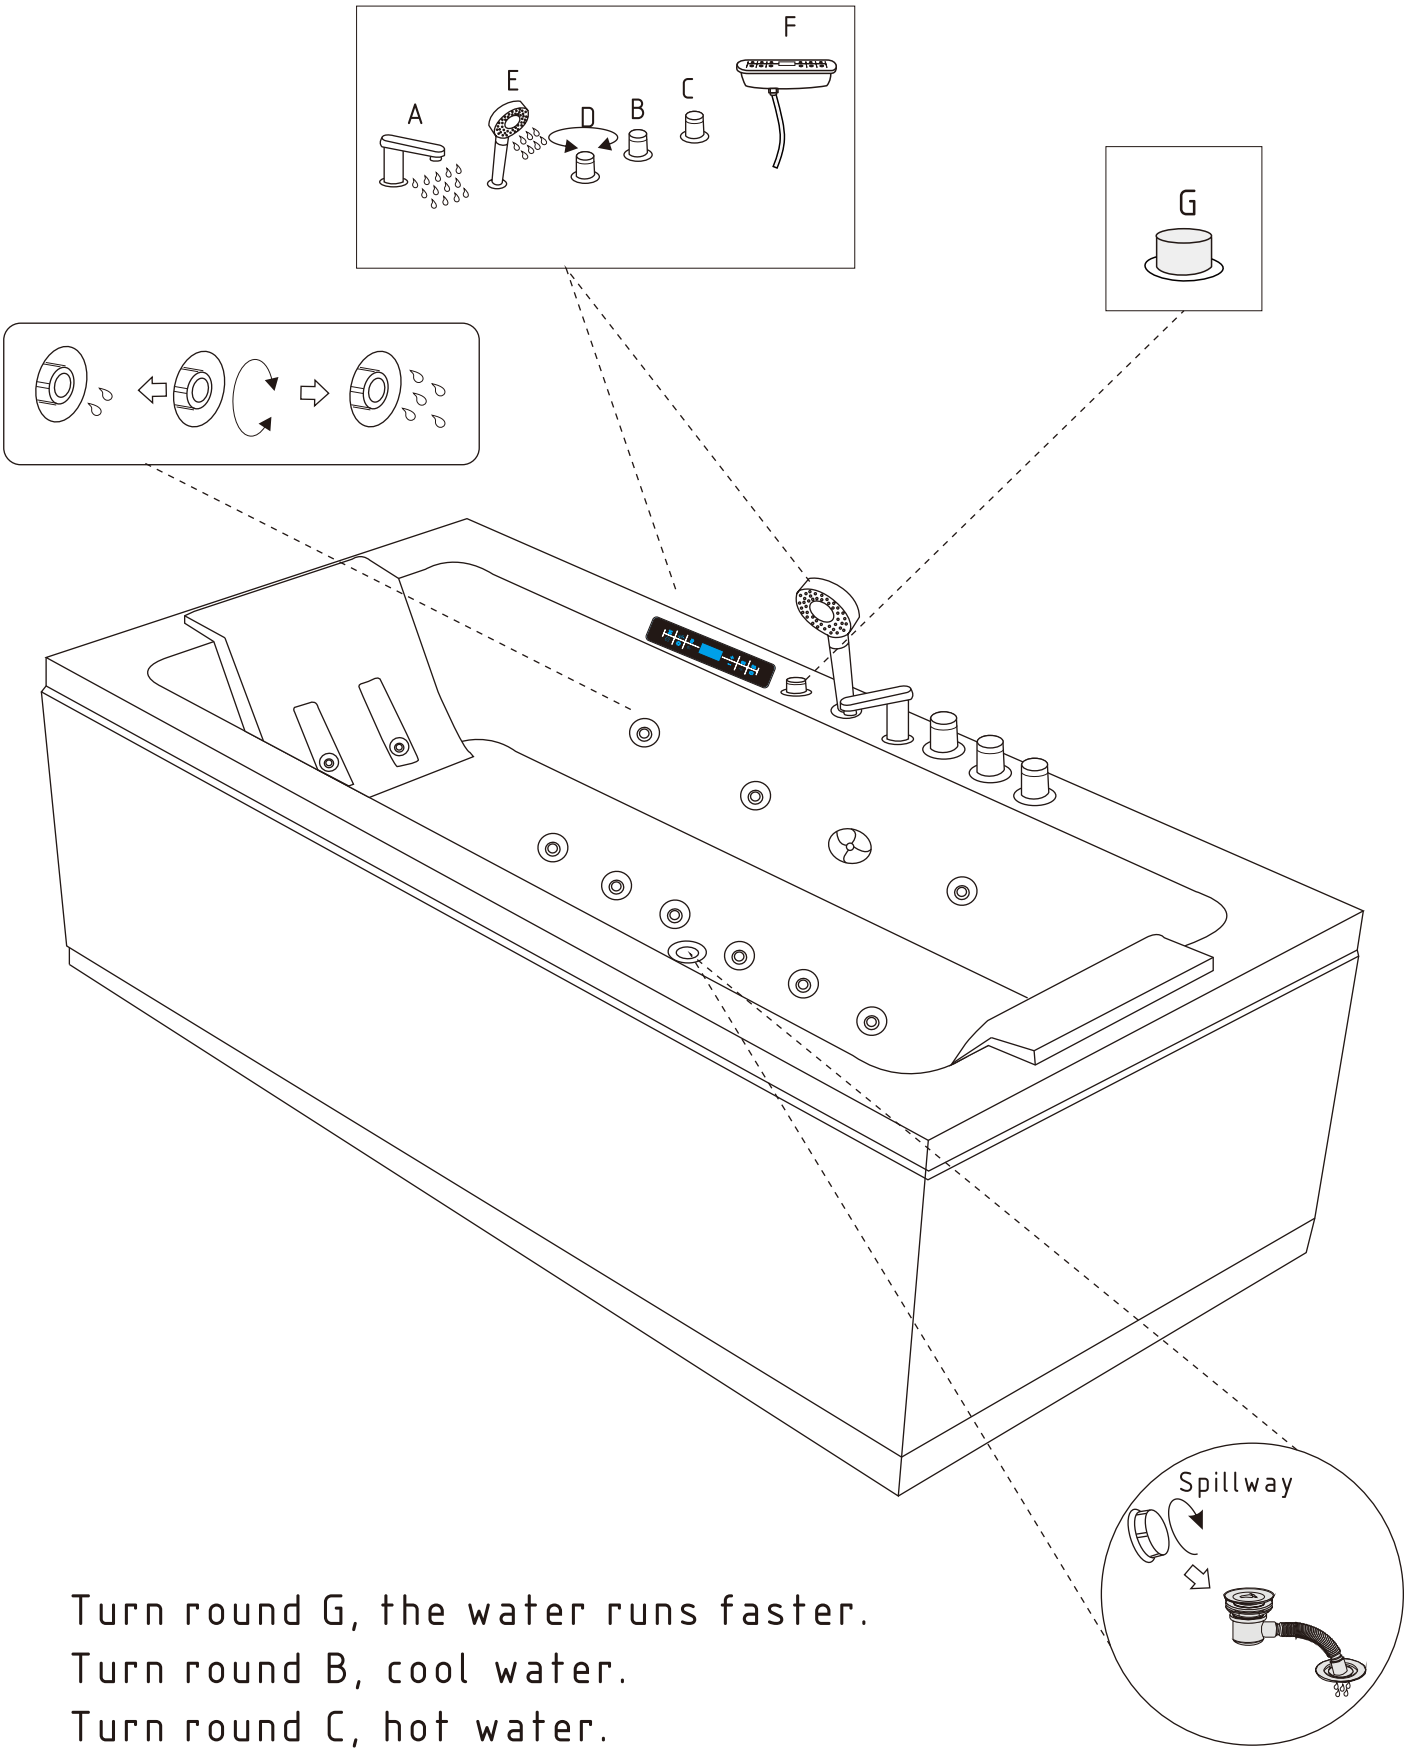

Turn round G, the water runs faster.
Turn round B, cool water.
Turn round C, hot water.
Turn round D, water comes from A or E.

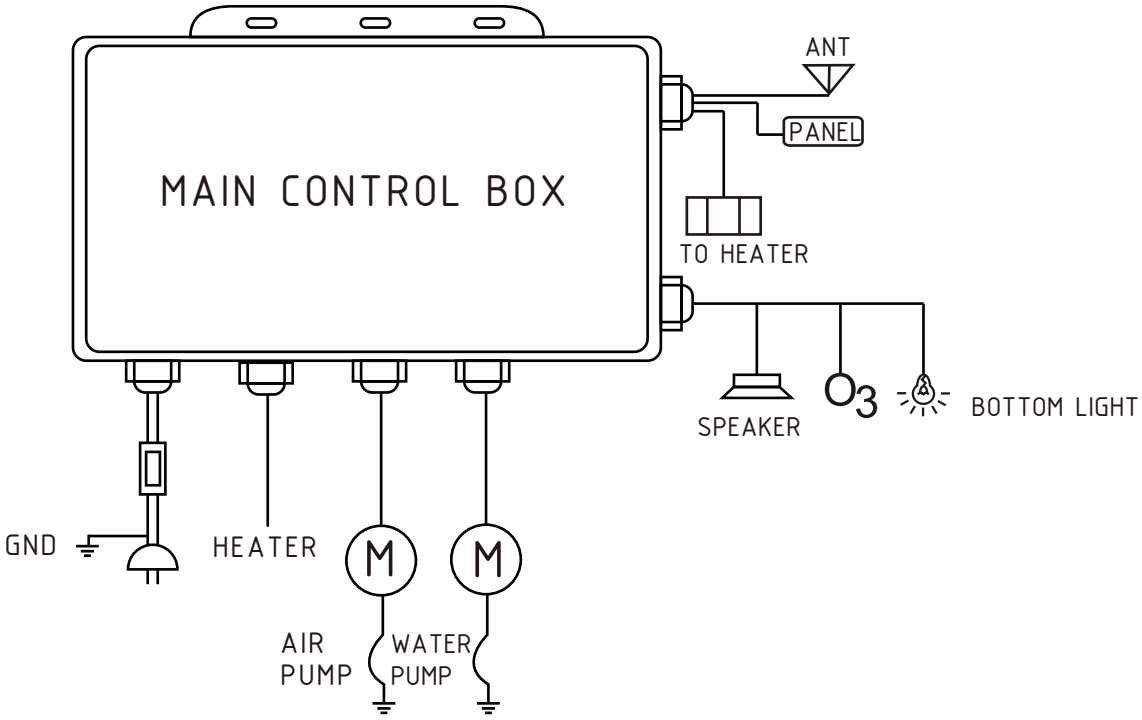

Schematic diagram of the panel

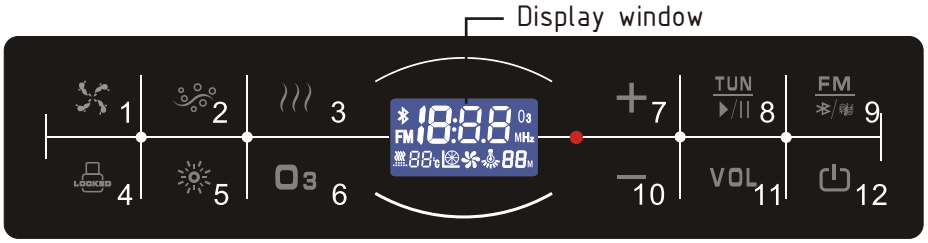

1. Water pump
2. Air pump
3. Thermostatic heating
4. Lock
5. Bottom light
6. Ozone sterilization
7. Adjusting plus
8. Frequency button
9. FM radio or blue tooth button
10. Adjusting minus
11. Volume button
12. Power ON/ OFF button

Operation instruction and direction

Power ON/OFF switch

Push down the switch,the controller is open,its status light ison,and other function can be used only when power is ON.

Bottom light ON/OFF button

Push down the button,the light is on;repeat the operation,the light is off.

Water pump ON/OFF button

Push down the button,the water purmp is on:repeat the operation,the water pump is off.

Air pump on/off button

Push down the button,the air pump is on:repeat theoperation,the air pump is off.

O3 Ozone sterilization button

Push down the button,Ozone sterilization is on;Repeat the operation,o3 will be stopped in 15 minutes when o3 isswitch.

Thermostatic heating

when the water pump is open,you can push down the button))) Then the Heater starts to run normally.when it is pressed on long time, you can press + − to set the water temperature.The temperature setting range is:30 to 50℃.Temperature display window will flash when the temperature is set,And will display current watertemperature in few seconds.

FM CD FM Radio&blue tooth ON/OFF

VOL＋— volume adjusting minus and volume adjusting plus button.

TUN＋— They can turn the radio step by step when they are pressed on short time.They can search the station when they are pressed on long time," it can select memory channel.Push down the button again, the blue tooth is on.Open the Bluetooth function of the controller,t hen search for Bluetooth devices through devices such as mobile phone, which will prompt you to enter password, the universal code is:000000, if the devices such as mobile phone can't connect to Bluetooth of the controller,please restart your mobile phone and the controller.

Notice:

Do not open the water pump When there is not enoughwater.

Run Environment

①POWER:AC220V ②Bottomlight:AC12V ③Heater:AC220V

④O3:AC12V ⑤Air adjust:AC220V

⑥Water/Windpump:AC220V

Notes of user

①Please read the instruction carefully when install the product, so that you can do it effectively in time.

②User should pay attention to the high-voltage on product smarked signs, Not to touch their locations, ensure Personalsafety;

③ Don't expose the controller to the moist or high temperature environment to prevent fire or electric shock.
Please towel thecontroller after using it.

④ Please keep water clean,no solid debris left.Otherwise,it will jam the ba ckwater and the pipeline,resulting in damaging the equipment or fittings.if jam happened,pleaseturnb off the power to clean stems immediately, then restart it.

⑤ Please do not pull any of the output lines, not beat or throw the equipment at 'random,Otherwise crusts or inner parts willbe broken.

⑥ Don't open the cover of the controller for
there are dangerousparts in allowed for maintenance it.
Only qualified servicemenare allowed for maintenance.

⑦ The used power supply must be in line with the specifiedvoltage value shown on the controller,otherwise it is notallowed to be used even burns out the controller burns out thecontroller.

⑧ The intervals of continuous power on and off must be over 30sfor extending the use life of the controller.

⑨ Please do not plug or pull the control panel with electricity, otherwise the devices will be damaged or unusual conditionswill appear.At the moment,turn off the power in seconds,restart it.

⑩ Please insert fittings(such as:light,speaker,valve,ozone sterilization,water pump,wind pump,steam generator,etc.) lnto corresponding output ports of equipment correctly,

Solutions of basic problems

① Q:why do not thermostat heating run?
A:Check whether you adjust the temperature of control panelto the water temperature or higher at room temperature.

② Q:Press lights,ozone,speakers,fan,air-conditioning and other functions,but why don't they start to run?
A:Check whether the plug-in terminals contacts with each other well;if lights and ozone sterilization still fails to run, please turnon the fuse and ensure if it has blew out then you can contact with my company staff.

③ Q:If speaker is voiceless,why is that?
A:Please open the FM radio,check whether the volume button on the panel has been Increased.If not,you can contact with my company staff.Reference to the following reasons:Speaker's terminal contacts badly;Internal chips had burnedout; the corresponding relay is open;the Speaker is broken.

④ Q:If there is too little FM radio programs received or in noisy, why is that?
A:Please check the location of the antenna, release antennaor to remove it to another appropriate location.